
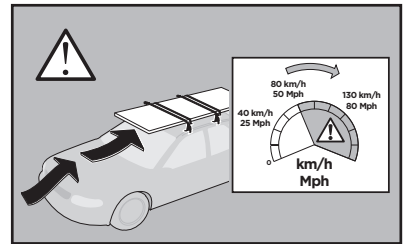
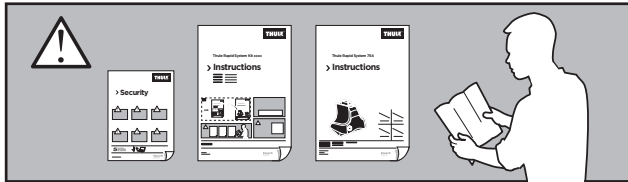
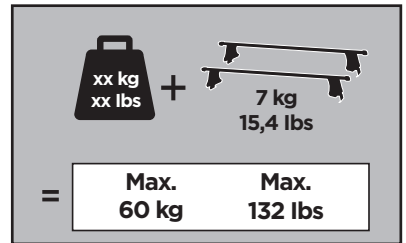







Thule Rapid System Kit 1451

> Instructions

FIAT Bravo, 5-dr Hatchback, 07-14


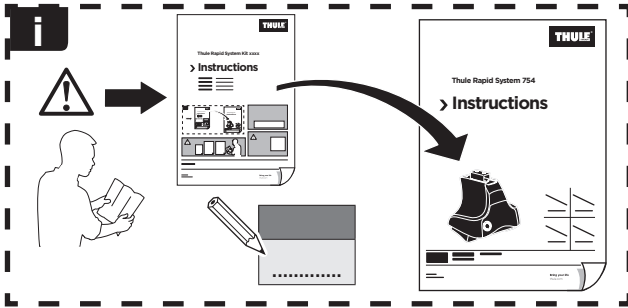


ISO 11154-E

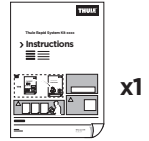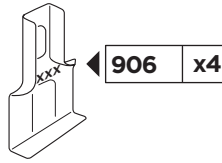

1


	X (scale)	X (mm)	X (inch)
FIAT Bravo, 5-dr Hatchback, 07-14	41	1061	41 ³ / ₄

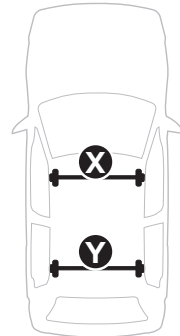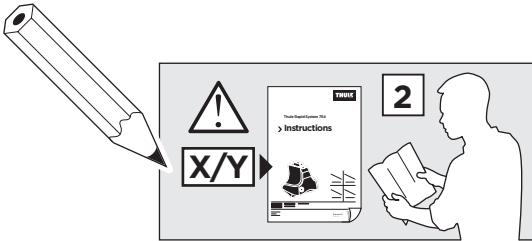


	Y (scale)	Y (mm)	Y (inch)
FIAT Bravo, 5-dr Hatchback, 07-14	37	1021	40 ¹ / ₄

2

FIAT Bravo, 5-dr Hatchback, 07-14

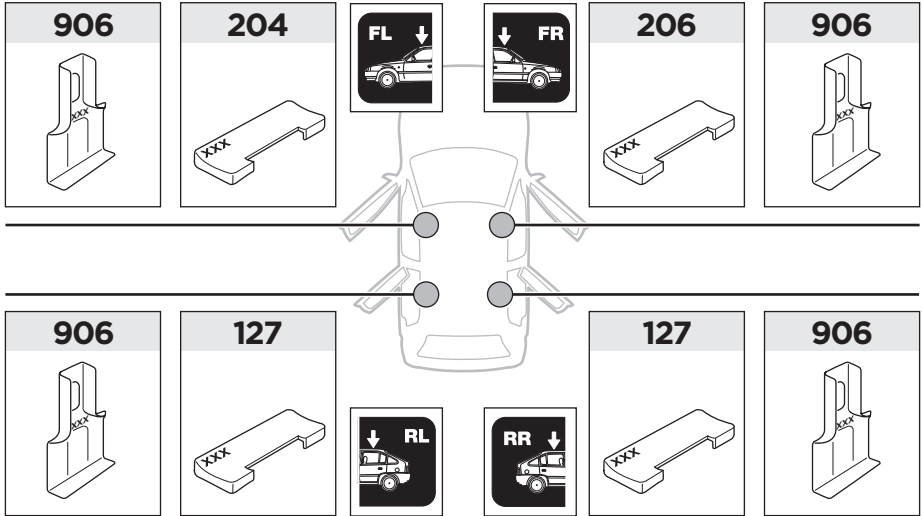

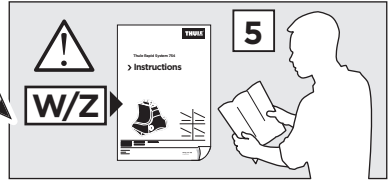3

	W (mm)	Z (mm)	W (inch)	Z (inch)
FIAT Bravo, 5-dr Hatchback, 07-14	140	850	5 1/2	33 1/2

