

# THULE Cab Lock – Mounting Instructions

**THULE**  
SWEDEN








Prod.nr. 309830 - 309831

29-03-2012  
MI-309830-001

Thule nv  
Kortrijkstraat 343  
BE 8930 Menen

## Thule Cab Lock Ducato - 309830


FIAT Ducato (>2007)  
CITROEN Jumper (>2007)  
PEUGEOT Boxer (>2007)  
FORD Transit (>2004)

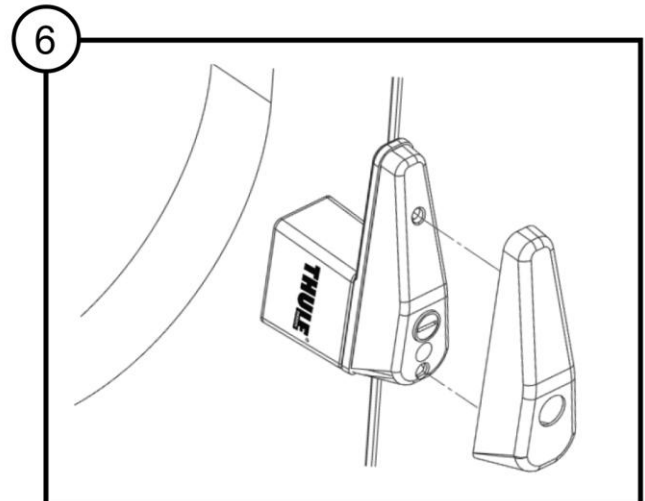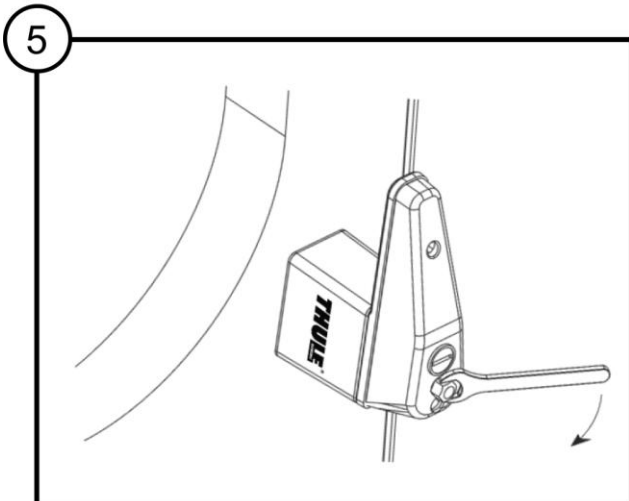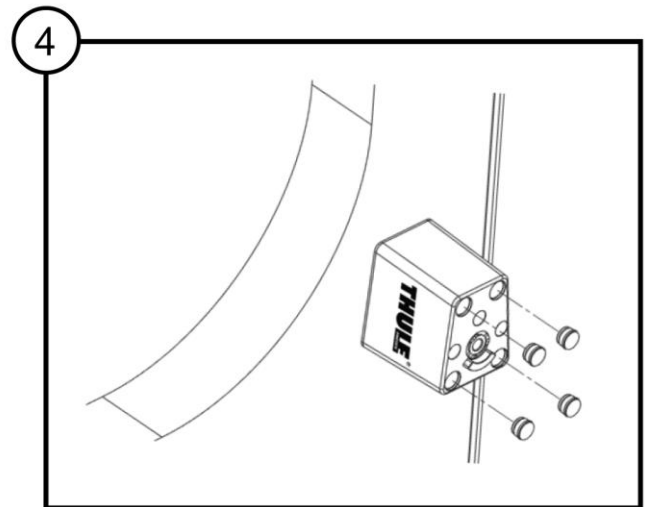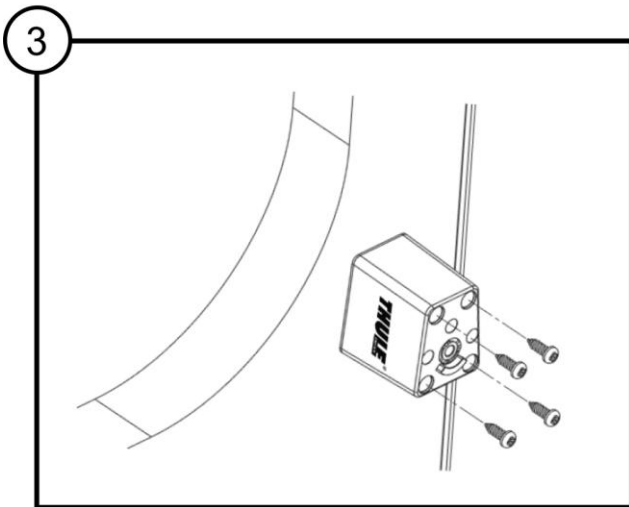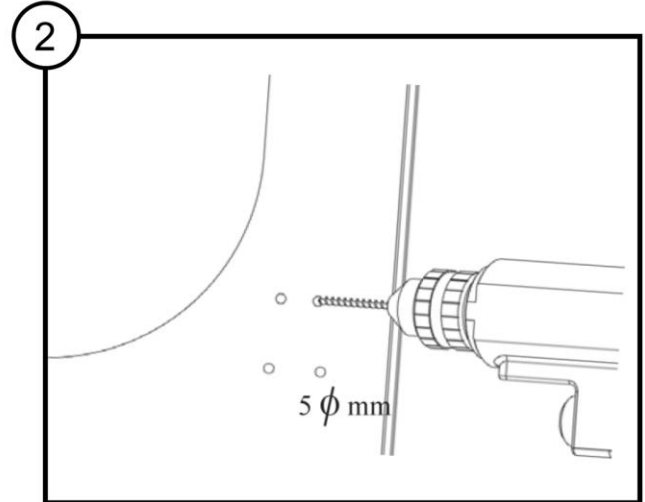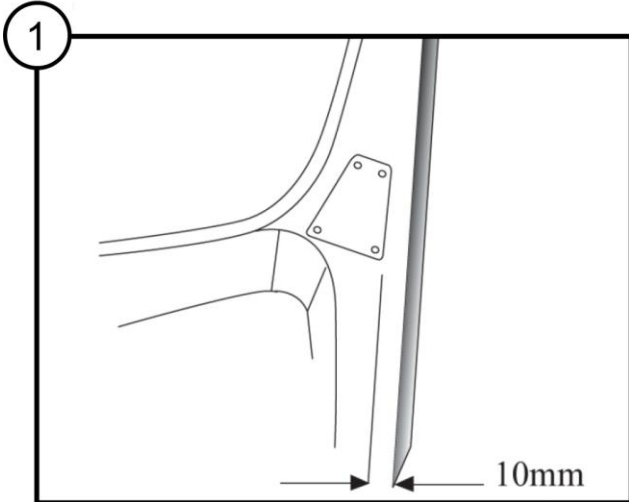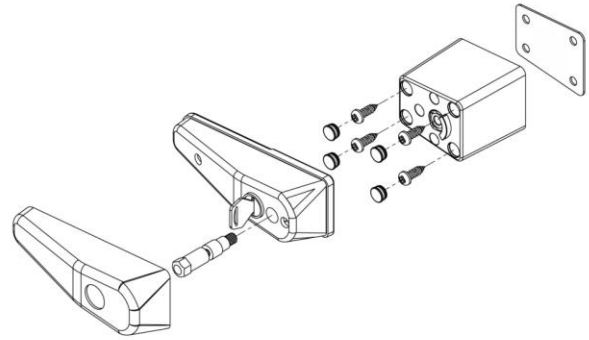

## Thule Cab Lock Sprinter - 309831

MERCEDES Sprinter (>2006)  
VW Crafter (>2006)  
RENAULT Master (>2010)  
OPEL Movano (>2010)

### MERCEDES Sprinter - VW Crafter

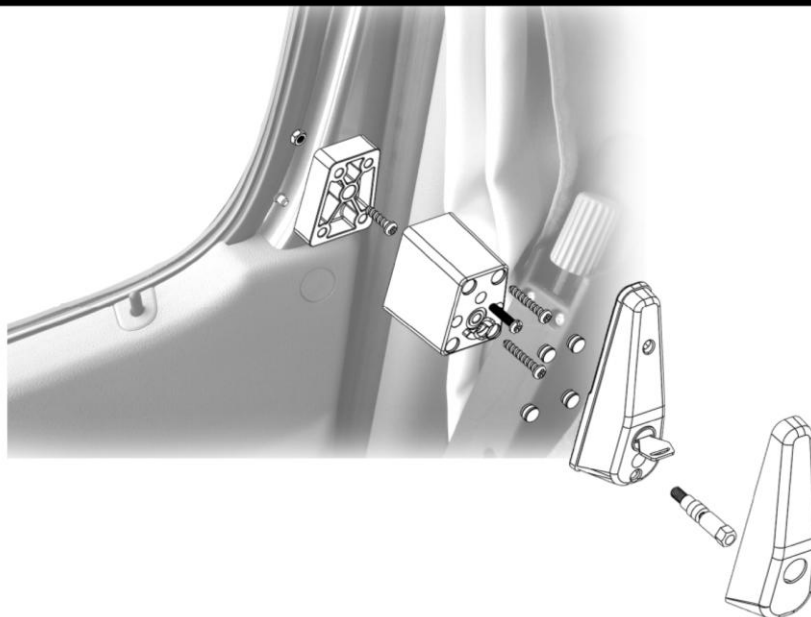

### RENAULT Master - OPEL Movano

